


nuna®

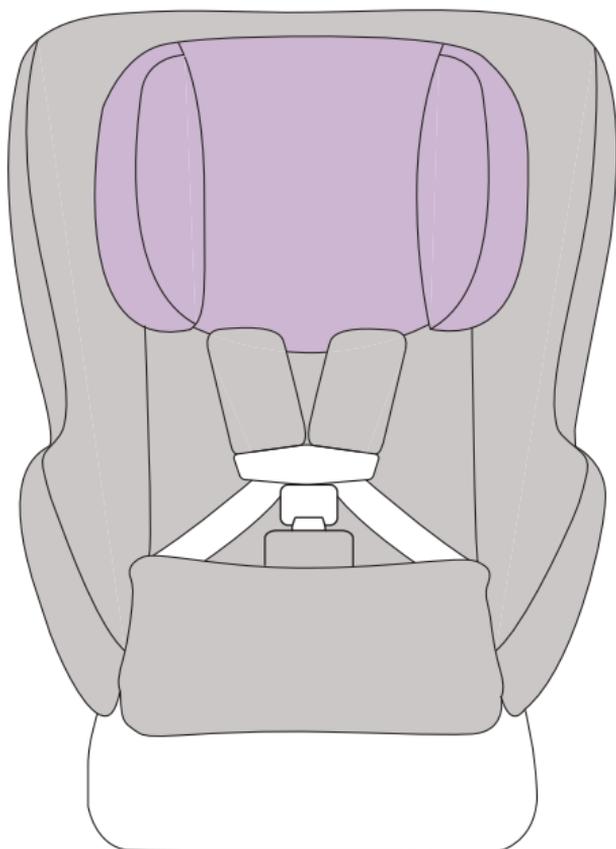

rava™
child restraint

cleaning instructions


Cleaning and Maintenance

⚠ WARNING: Do not attempt to disassemble the Child Restraint. Only perform steps shown in this manual.

Seat Cover Removal

1 To remove seat pad: (1)

- Recline Child Restraint to rear facing position 1 (BLUE).
- Set Head Support in highest position.
- Loosen and unbuckle Harness and Chest Clip.
- Fully extend Calf Support.
- Remove Tether from Storage Anchor.

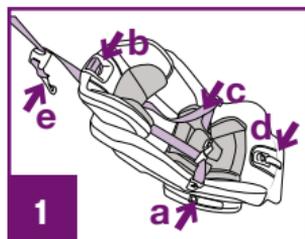


- Remove Harness/Buckle Pads as well as Infant and Head Inserts.


Take care when removing Head Support Cover so as not to damage the energy absorbing foam.

3 Remove Head Support Cover. (2)

- Grasp Head Support Cover at top behind Head Support Button.
- Peel Cover off Head Support; work on one side then the other. Unsnap Cover and remove.

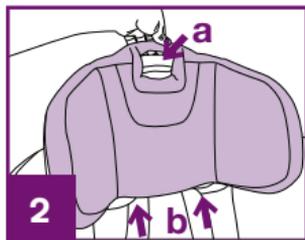


- 4 Unsnap Seat Cover. **(3)**
- 5 Remove Seat Cover from Calf Support.
- 6 Remove Seat Cover from beneath Harness Release Button frame. **(4)**
 - a Grasp the Seat Cover at the top of the Harness Release Button.
 - b Pull away from Button (toward seat back) and up.
 - c Work cover out from under the Button frame.
- 7 Remove Cover from Child Restraint. **(5)**
 - a Start at bottom, near Calf Support, work toward Buckle Holder. Pull Seat Cover out of seat cover retaining channel.
 - b Unhook Cover beneath Buckle Tongue Holder.
 - c Continue to the Tether.
 - d Repeat steps A through C for the other side.
- 8 Flip cover over the top of the Child Restraint. Slide Seat Cover off of the Tether. **(6)**

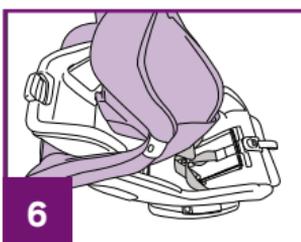

Seat Cover Assembly

- 1 Reverse Steps of Seat Cover Removal.

- a Recline Child Restraint to rear facing Position 1.
- b Tuck the seat cover into the retaining channel along the edge of the seat and tuck the corner flap in near the screw (7).
- c From the center of the seating area, push the white plastic tab (7) on the seat cover down over the screw while pulling down on the fabric from the outside (8).
- d Ensure both corner pockets are secured to the outside of the Calf Support.

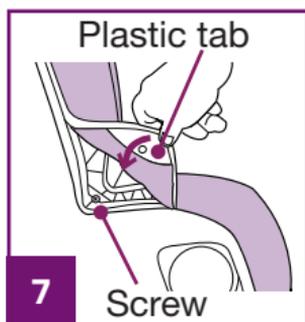

Cleaning the Seat Cover and Harness Pads

- 1 When required, Seat Cover and harness pads may be machine washed with cold water and mild detergent, on the delicate cycle.
- 2 Allow to air dry.

DO NOT use bleach or other harsh chemicals to clean your Child Restraint Cover or Harness.

DO NOT attempt to iron your Child Restraint Cover.

Cleaning the Infant Insert

- 1 When required, the Infant Insert may be machine washed with a mild soap and cold water. The support wedge located on the back side of the Infant Insert should be spot cleaned only. **DO NOT** machine wash the support wedge.
- 2 Allow to air dry.

Cleaning the Harness

The Child Restraint harness system cannot be removed. **DO NOT** attempt to remove the harness system.

- 1 When required, harness may be hand washed with a sponge and warm soapy water.
- 2 Towel dry excess water and allow to air dry.

DO NOT attempt to iron your Harness.

Cleaning the Shell

- 1 When required, shell may be hand washed with damp sponge.
- 2 Towel dry.

DO NOT use abrasive cleansers on the Shell.

Cleaning the Buckle

BUCKLE CAN NOT BE REMOVED.

- 1 To clean buckle, wipe with damp cloth.



nuna.eu

1-855-NUNA-USA